


Decentral installation

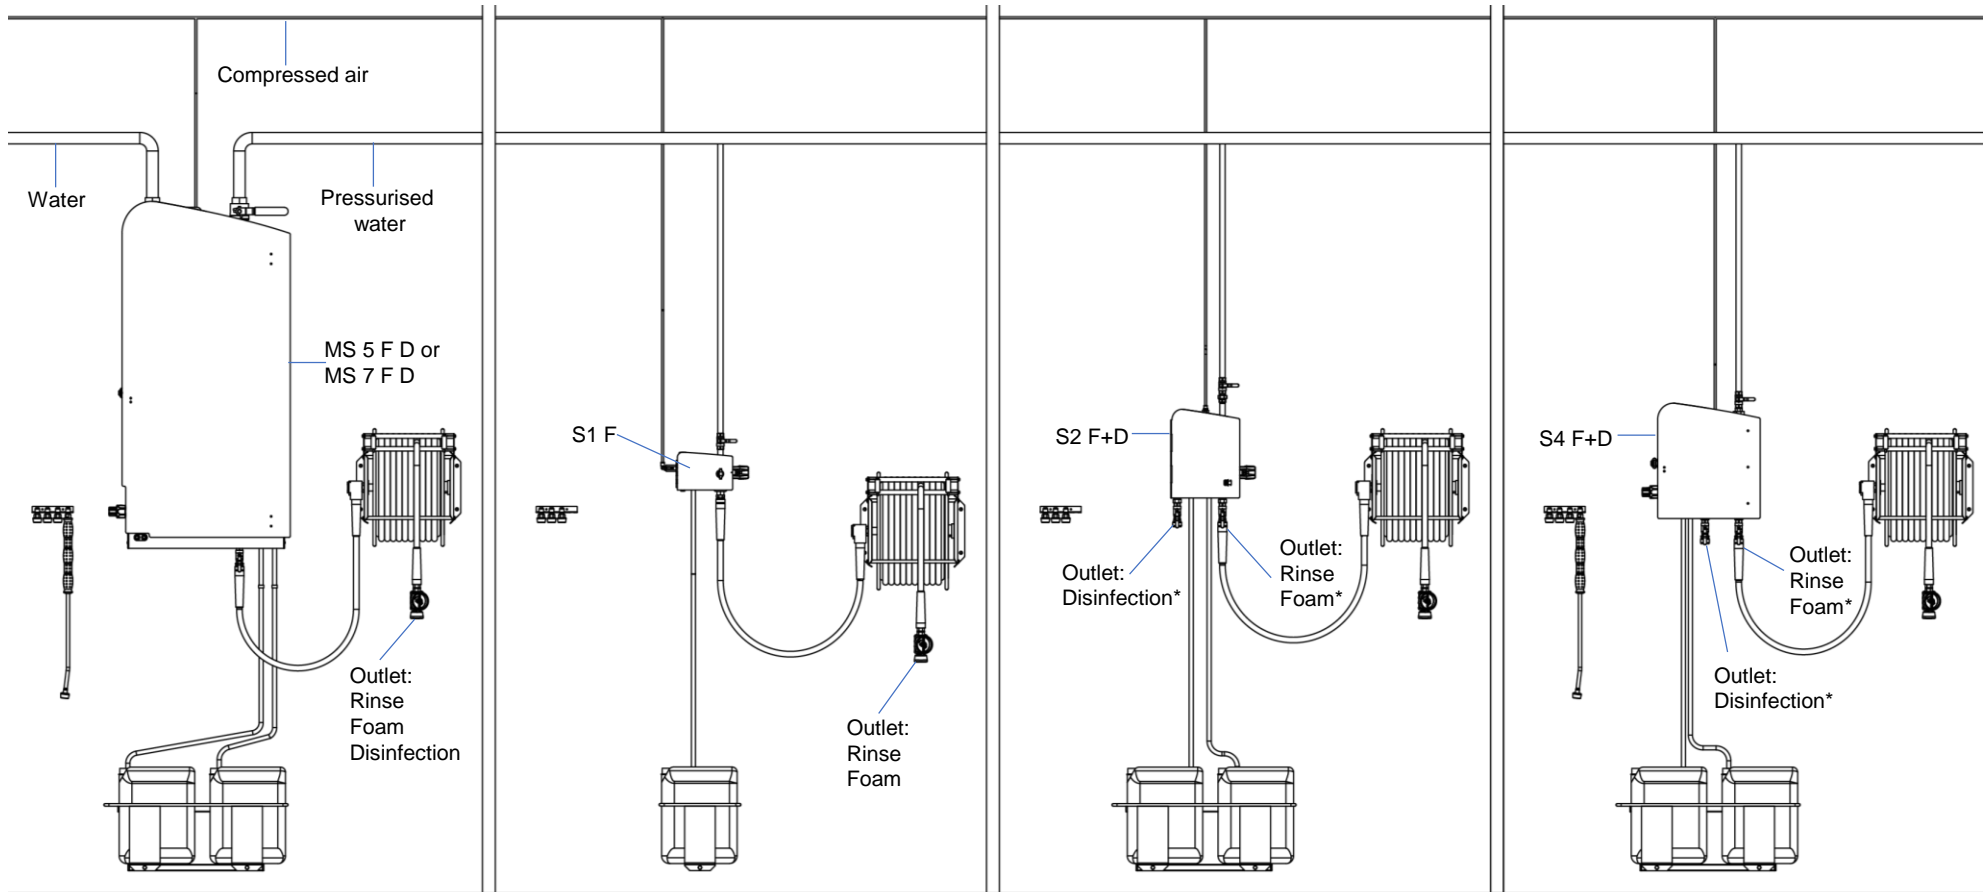

Main Station is also connected to current.

* Connection hose to be moved manually (quick connection).